



S326GS

GLOW SHRINK FILM INSTRUCTIONS

*Great for making....

- Ornaments
- Luggage and key tags
- Jewelry
- Plaques or (personalized license plates for bikes...)

Materials Needed:

- 1 cookie sheet or baking pan (*glass, insulated, "air-bake", or "no burn" pans will not work*)
- Scissors, hole punch (if desired)
- Oven mitts

Creating your designs:

Your sheets can be printed on both sides. Create a design (works best if not a full sheet 8 ½ x 11 inch size or smaller than 1 x 1 inch size) in any graphic software program. You may also draw or write directly on your sheets using permanent or washable markers.

Printing:

For best results, set your printer at the following settings:

HP:

Paper Choice: HP Premium Photo Paper Glossy
Print Mode: Best

Epson:

Paper Choice: Matte Paper Heavyweight
Print Mode: Photo Enhance Standard

Canon:

Paper Choice: Matte Photo Paper
Print Mode: High

Lexmark:

Paper Choice: Photo/Glossy
Print Mode: Best

Print one sheet at a time. Allow 5 – 10 minutes to dry.

Printing on Lexmark™ ink jet printers or HP™ DeskJet 1200C / 1600C printers is **not** recommended.

Preparing for baking:

Cut out your designs with scissors into any shape you prefer. (Round corners work better than square corners)

If you want to create holes for ornaments, keychains, or jewelry, please use your hole punch to do so prior to baking.

Baking:

Preheat your oven to 350° F - 400° F (Do not use a microwave or toaster oven.)

Place your designs on the cookie sheet (if more than one, at least 1 inch apart).

Place in center rack of oven and bake for 2 minutes. Carefully remove the pan from the oven. If the designs are not completely flat yet, place back in oven for an additional minute.

Let cool for 5 minutes before removing your designs from the pan. Let the pan cool before baking additional sheet designs!